


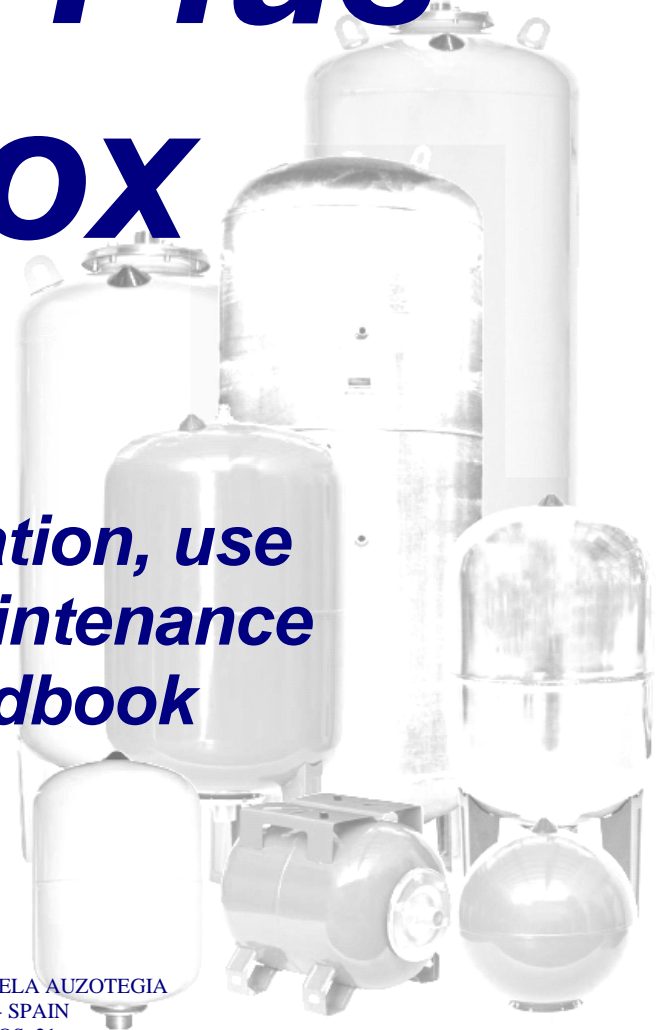

***Replaceable bladder  
hydropneumatic tank***

# ***AMR-Plus Inox***

***Installation, use  
and maintenance  
handbook***



PLENTZIA BIDEA, 3 BILLELA AUZOTEGIA  
48100 MUNGIA- SPAIN  
APDO CORREOS, 21  
C.I.F. : A-48-045199  
Tlf.: +34 94 674 04 00  
Fax: +34 94 674 09 62  
E-mail: [nacitec@ibaiondo.com](mailto:nacitec@ibaiondo.com)

# INDEX

1. DESCRIPTION.....	2
2. VESSEL COMPONENTS .....	2
3. CHARACTERISTICS .....	3
4. APPLICATION.....	4
5. FUNCTIONING.....	5
6. INSTALLATION.....	6
7. OPERATION .....	7
8. MAINTENANCE.....	7
9. DISASSEMBLY .....	8
10. NOTES .....	9

## 1. DESCRIPTION

Welded steel tanks manufactured according to the European Directive 2014/68/EU for pressure equipments. They are made of two inlaid bottoms, joined together through welding cords following the proper procedure and according to the required authorized staff. They are loosely able to resist the working pressure for which they have been designed.

The fully waterproof bladder is made of synthetic flexible rubber as a single piece, keeping constantly isolated water from nitrogen, avoiding any possibility of corrosion of the inner metal surface of the tank or the dilution of nitrogen in the water.

The design of the membrane and its dimension are calculated to fully occupy the inner surface of the tank avoiding thereby its breakage.


AMR-Plus Inox hydropneumatic tanks are provided with a valve for the nitrogen-chamber pressure regulation and with threaded stainless steel R1”G.M water connection.

Final external application of epoxy coat over phosphate surface. Blue color RAL-5012.

The resistance of the tanks are tested at a pressure 1,5 times higher than the maximum working pressure.

## 2. VESSEL COMPONENTS

- 1.- Steel tank
- 2.- Replaceable bladder
- 3.- Stainless steel threaded flange R1” G.M.
- 4.- Inflate valve
- 5.- Legs
- 6.- Pump support

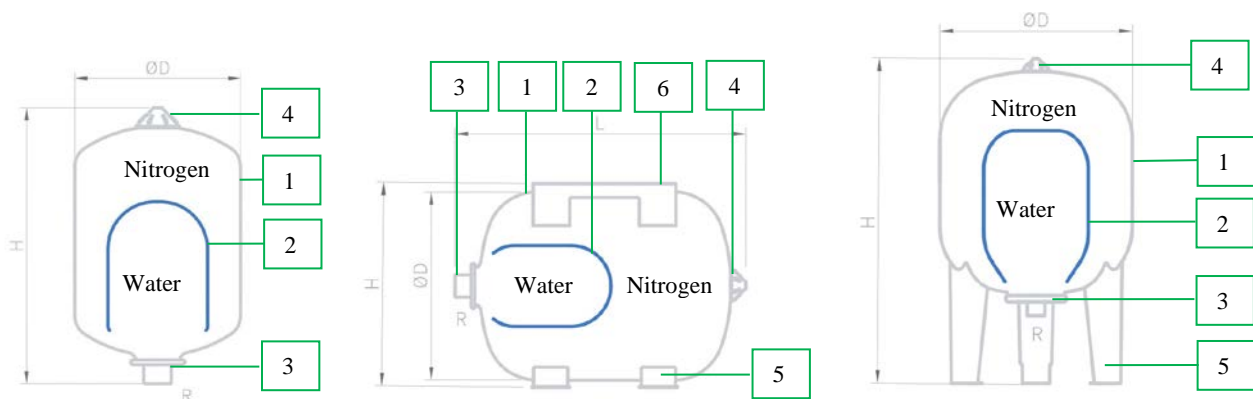

### 3. CHARACTERISTICS

- ④ **Name:** AMR-Plus Inox
- ④ **Use:** Replaceable bladder hydropneumatic tank for booster sets
- ④ **Volume:** 5 - 50 liters
- ④ **Maximum service pressure:** 8 – 10 Bar
- ④ **Test pressure:** 12 – 15 Bar
- ④ **Precharge pressure:** 3 Bar
- ④ **Gas:** Nitrogen
- ④ **Temperature Min / Max:** -10°C / +100°C
- ④ **Dimensions:** see below
- ④ **Threaded water connection:** Stainless steel R 1" G.M
- ④ **Membrane:** Replaceable bladder
- ④ **Finish (painting):** External epoxy coating
- ④ **Color:** Blue RAL-5012
- ④ **Inflate valve:** Included
- ④ **Warranty:** 5 year
- ④ **Designed and manufactured according to PED 2014/68/EU**

#### Models without feet 10 bar

Code	Model	Capacity (Litres)	Weight (kg)	Ø D (mm)	H (mm)
06100510	5 AMR-PLU INOX	5	2	200	250
06100810	8 AMR-PLUS INOX	8	2,5	200	350
06101210	12 AMR-PLUS INOX	12	3,2	270	320
06102010	20 AMR-PLUS INOX	20	4	270	425
▶ 06102410	24 AMR-PLUS INOX	24	5,6	270	470
06102510	25 AMR-PLUS INOX	25	5,6	320	430
06103510	35 AMR-PLUS INOX	35	7	360	485
6105010	50 AMR-PLUS INOX	50	10	36	620

▶ NOTE: The maximum working pressure of the 24 AMR-PLUS INOX is 8 bar

#### Models with feet 10 bar

Code	Model	Capacity (Litres)	Weight (kg)	Ø D (mm)	H (mm)
06103511	35 AMR-PLUS INOX	35	10	360	615
06105011	50 AMR-PLUS INOX	50	12	360	750

#### Horizontal models with support 10 bar


Code	Model	Capacity (Litres)	Weight (kg)	Ø D (mm)	H (mm)	L (mm)
06102012	20 AMR-S PLUS INOX	20	6	270	300	425
06105012	50 AMR-S PLUS INOX	50	12	360	390	620



## 4. APPLICATION

AMR-Plus Inox hydropneumatic tanks are intended for use in water catchments, facilities for drinking water supply, as well as fire groups, forming an essential part of the booster sets. In addition to maintaining a water reservoir pressure and ensure optimal water supply, allow longer life of the booster sets, significantly reducing the number of operations start-stop pump and a significant energy savings.

A typical installation of a hydropneumatic tank could be as follows:

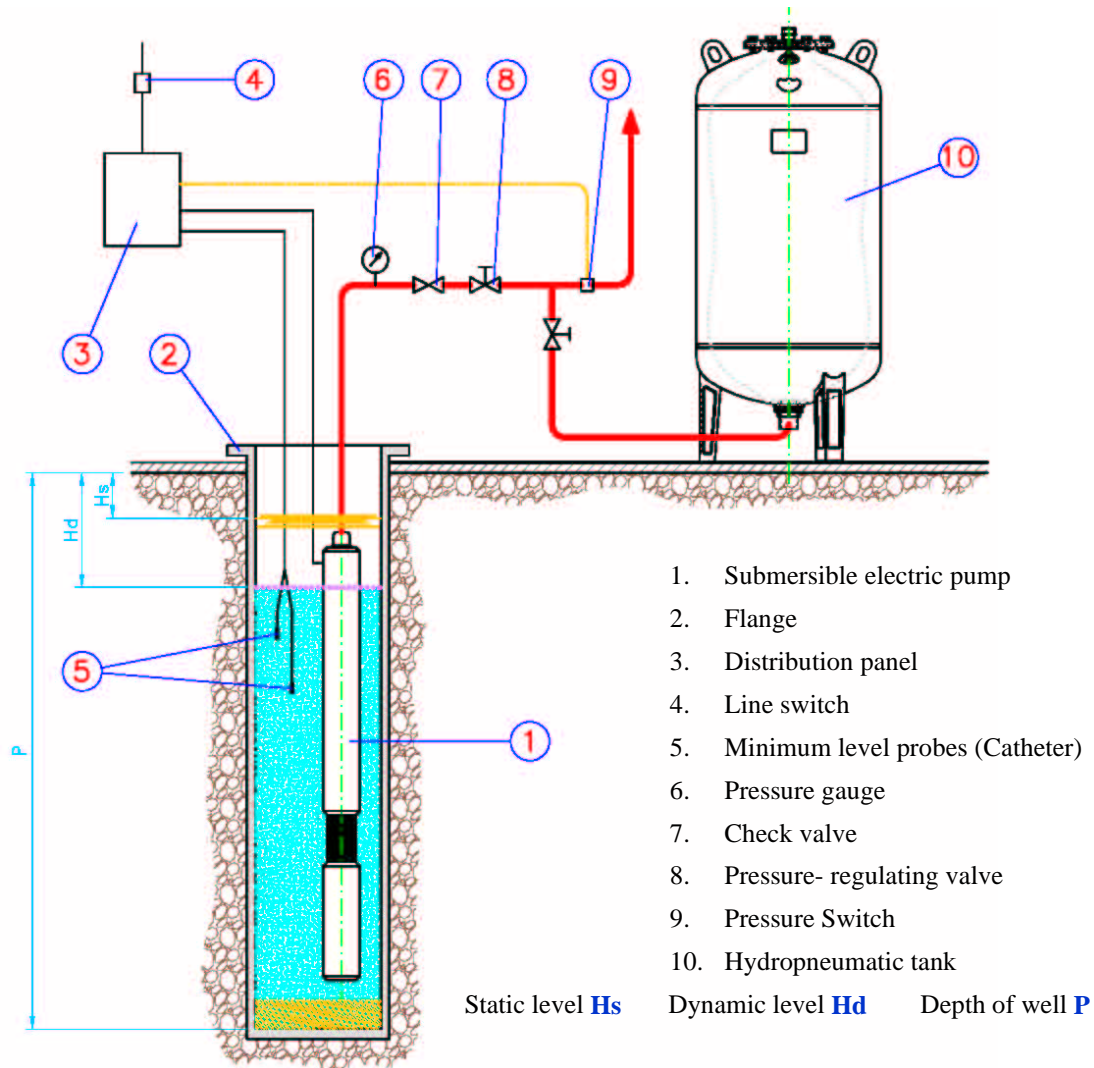

They are not suitable for use with hydrocarbon fluids and those belonging to Group 1 in accordance with Directive 2014/68/EU.


The most important technical characteristics of AMR-Plus Inox hydropneumatic tanks and other data relating to its manufacture are indicated on the label attached to the product. This label should never be deleted or modified. In addition, is provided an instruction handbook of the product.



## 5. FUNCTIONING

Drinking water collected from the network, a reservoir, etc., is driven into the accumulator by the pump unit.

As the water enters the tank, it is stored inside of the bladder which separates hermetically the nitrogen chamber from the water chamber. The entry of water into the AMR-Plus Inox hydropneumatic tank involves a reduction of the initial volume of the captive nitrogen in the vessel and therefore the pressure increase.

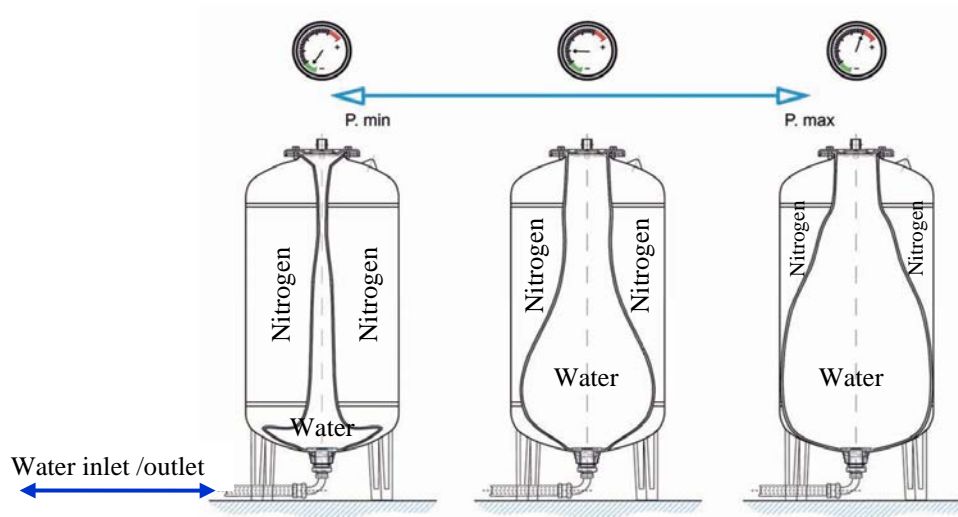

When the maximum required pressure is reached (pump stop pressure), the pressure switch cuts off the flow of water between the pump and AMR-Plus Inox hydropneumatic tank. At this moment there will be a volume of water stored inside of the hydropneumatic tank at a pressure equal to the stopping pressure of the pump.

Depending on the needs and user requirements, the stored energy through the captive nitrogen will push the water contained into the bladder toward the points of consumption.

As a result of the demand and the various supplies from the vessel to the system, the bladder of the tank which contains the water gets empty and the nitrogen chamber pressure decreases consequently. As soon as the pressure falls below the pressure at which the pressure switch is calibrated (Pump star pressure), the pressure unit starts working, providing again the necessary water according to the current need and also recovering the normal operating conditions.

While the nitrogen chamber pressure is maintained, the cycle runs automatically, as many times as the maximum and minimum pressures are reached. It is therefore essential to implement and verification a periodic maintenance of the nitrogen preload pressure in the tank (See Section 7 & 8).

## 6. INSTALLATION

Check as soon as possible the equipment matches the order and that all components are free from damage, and the correct instructions are enclosed. It is especially important to inspect the pressure vessel for any deformities that could affect its strength. In the event of defects or damage contact the manufacturer.

The hydropneumatic tank bears a designation plate containing all important and necessary data. Check that this matches the stipulated requirements and is appropriate for the system.

Before installation, make sure that the hydropneumatic tank volume has been calculated by authorized staff. Ensure that technical staff has an appropriate profile and training at the facilities of this type of equipment. In any case it should be considered local regulations for the operation of the hydropneumatic tank. Installation and operation must be carried out according to good practice by professional installers and qualified technicians.

They may be installed only vessels whose appearance does not provide damage to the body of hydropneumatic tank. It is prohibited drilling, welding on the vessel or in any item attached to it.

Make sure there is an adequate access around vessel to allow subsequent maintenance and servicing. The equipment must not be over-insulated in any way.

The facility in which the hydropneumatic tank is placed should provide for the installation a security system that limit the pressure and ensure that the pressure does not exceed the maximum working pressure of the hydropneumatic tank.

It is prohibited drilling, welding on the vessel or any item attached to it.

Do not place any valve whose closure may unintentionally cancel the operation of the hydropneumatic accumulator.

Avoid direct radiations over expansion vessel to protect the membrane of possible overheating.

Make sure the hoses and couplings are tight and the working temperature or pressure for which is designed the hydropneumatic tank is never exceeded. Under no circumstances exceed the maximum pressure indicated on the label of the hydropneumatic tank. The vessel could explode.

The pipes must be sized and installed in accordance with the specific requirements according to current national and local regulations.

The pre-commissioning, subsequent fundamental changes in the installation and periodic reviews should be initiated by the user in accordance with regulations in operational safety test.

## 7. OPERATION

AMR-Plus Inox hydropneumatic tanks are supplied from the factory with the inflation pressure specified on the label attached to the product (3 Bar - Nitrogen). To ensure the proper functioning of the system, this value should be set to a pressure value  $P_0$ , taking into account the characteristics of each installation, by filling nitrogen to the preload value  $P_0$  or purging through the valve to reduce the initial nitrogen preload to the value  $P_0$ .

*Adjusting inflation pressure to  $P_0$ :* To ensure proper operation of the hydropneumatic tank is necessary to check and adjust the pressure. In the case in which the hydropneumatic tank is placed on the high side of the pump (Drive), the precharge pressure  $P_0$  has to be adjusted as follow:

$$P_0 \text{ (Bar)} = \text{Pump start pressure} - 0,2 \text{ Bar}$$

In the case in which the hydropneumatic tank is placed on the low side of the pump, the precharge pressure  $P_0$  has to be adjusted as follow:

$$P_0 \text{ (Bar)} = \text{Accumulator inlet pressure} - (0,5 \div 1) \text{ Bar} \geq 1 \text{ Bar}$$

*If the initial  $P_0$  required precharge pressure is higher than 3 bar, before reloading nitrogen, it is necessary to,*

- Introduce water through the inlet/outlet connection of the hydropneumatic tank to cover the bottom coupling or orifice.
- Isolate the hydropneumatic tank from the installation.
- Once this is done, charge or refill with nitrogen through the inflation valve up to calculated  $P_0$  pressure.

After adjusting the pressure according to the instructions outlined above and taking appropriate precautions, it proceeds to communicate the accumulator with the installation. Its operation is automatic.

## 8. MAINTENANCE

The maintenance must be performed only by the authorized staff. Never disassemble the vessel without having depressurized the unit and the inner pipe or air chamber to safe values previously.

At least once a year, check that the value of the precharge pressure  $P_0$  of the vessel is maintained within the values indicated in the previous section, taking care to do by the contrast of values at the same temperature, preventing unnecessary and prevent abnormal operation. For this purpose, it is necessary,

- Isolate the hydropneumatic tank from the installation.
- Drain water from hydropneumatic tank.
- Once emptied of water, check pressure through the valve. If the deviation of the measured pressure respect the precharge pressure  $P_0$  is greater than +/- 20%, adjusted to the original value  $P_0$ , following the instructions given in section 7 of the instruction handbook.

At the time of depressurizing hydropneumatic tank and emptying of water, ensure that the vessel has enough water to cover the coupling (inlet) so that the water holds a backpressure which protects the bladder from extrusion.



Make sure that the precharge pressure never exceed the design pressure of the equipment, coupling hoses and couplings are tight and the working temperature and pressure for which is designed the hydropneumatic tank is never exceeded.

As spare parts may be used only the original components of manufacturer.

Periodic tests should be conducted according to the provisions of Pressure Equipment Regulations.

## 9. DISASSEMBLY

Never disassemble hydropneumatic tank without having depressurized previously the installation and the vessel.

Before proceeding to removal hydropneumatic tank, make sure that all parts exposed to pressure are depressurized. Insulate the vessel from the system. If the measured pressure through the inflation valve is more than 4 bar, firstly reduce the pressure through the purge valve (nitrogen chamber) up to 4 Bar. Then, drain water from hydropneumatic tank. Finally, bleed through the inflation valve, reducing the nitrogen pressure to depressurize the hydropneumatic tank completely. Remove hydropneumatic tank and change.

When replacing the hydropneumatic tank will be disassembled having depressurized the installation and the water temperature below 35°C.

AMR-Plus Inox series vessels are replaceable bladder models. In case of bladder rupture, it can be replaced.

